

AUGUST 2020

Terra AC: TerraConfig App & Portal

Introduction



Agenda

- Introduction
- TerraConfig Accounts
- TerraConfig Portal
- TerraConfig App
- Q&A



Fully connected

TerraConfig smartphone app

- User is typically the installer or technical operator / support engineer.
- User can be granted an App account via the TerraConfig Portal. An ABB employee must create the account.
- The user can access any charger in proximity range (Bluetooth connection).
- Search for the charger and pair via pin code verification (the same pin code that is used with ChargerSync App)
- Goal is for the installer is to configure settings while commissioning.



Fully connected

TerraConfig smartphone app



Functionality:

- Device Sync to synchronize charger with ABB back-end server
- Firmware info
- Device info (error + session logs)
- Device update (firmware update)
- Charger link (connectivity options)
- OCPP server (configuration)
- Settings (user-settable max static current limit)
- Card (enable externals RFID cards)
- Device mode (free vending mode)

Fully connected

TerraConfig Web Portal



- There are 3 different account levels 1st level: Global Product Group 2nd level: Local Sales Unit 3rd level: Customers/Companies
- The user of the portal is typically the remote administrator of a site/installation/group of chargers.
- Create + manage Web + App Accounts
- Manage the OCPP configuration settings

Fully connected

TerraConfig Web Portal



For larger CPOs and 3rd party backend

Selected functionality:

- Configure 3rd party OCPP domain configuration
- Manage companies that have access to TerraConfig solutions
- Create TerraConfig web portal accounts for partners
- Create TerraConfig app accounts for ABB employees or partners



Portal Introduction

Function

- Manage the Web Account and App Account
- Control the OCPP configuration settings
- <u>https://abb.installer.chargedot.com/#/login</u>

Upgrade Package	OCPP Servers	Configuration>Third Part	y Domain Configuration						
Package Code Management	Third P	arty Domain Configura	ation						
Authorization								⊕ Adda	New Configuration
Company Management	NO.	Third Party Name	Domain	Port	Protocol Type	Protocol Version	Certificate Code	Certificate Validity	
Web Account	- 1	Greenflux	ws://chargepointservic ej.greenflax.el	80	0079	ocppo5j			•
App Account	2	Colot PROD	wss//ablacdink.charge dot.com	9043	OC55	ocpp06)	1	08/05/2020 08/05/2020	۰
OCPP Server Configuration		CDot test	wss://testabb.cdlink.ch angedot.com	9043	0079	ocppo5j	1	08/05/2020 - 08/05/2021	•
	. 4	ABB Test	wss//ocppt6.chinaciou dsites.cn	443	0099	ocpp06j	1	08/05/2020 - 08/05/2025	٠
									1 >
				_	_				
			1			and the second second			





 \oplus English \lor



\leftarrow \rightarrow C $$ https://	testabb.installe	er.chargedot.com/#/d	ocpp/server/list					Q	☆ 👳	: (
<u>X</u> TerraConfig								Cdot LSU	jun	G
Authorization Management	OCPP Servers C	onfiguration>Third Party [Domain Configuration							
OCPP Server Configuration ^ Third Party Domain Configuration	Third Pa	arty Domain Configura	ation					⊕ Ada	d a New Configur	ation
Certificate Management	NO.	Third Party Name	Url	Port	Protocol Type	Protocol Version	Certificate Code	Certificate Validity		
	1	CDTEST	wss://testabb.cdlink.cha rgedot.com:9090/ocpp	9090	OCPP	ocpp16j	11	10/11/2006 - 10/11/2031		•

< 1 >

Web Account

	TerraConfig							Cdot LSU	e jun
Web Account	Authorization ^	Authorization N	1anagement>Web Account						
Account list	Company Management	Web Acco	ount Management						
add a new web account	Web Account	Account Ema	ail:	Company:		Search		+ Ada	a New Web Account
	App Account	NO.	Account Email	Company	Account Type	User Name	Register Time	Account Status	Account Management
change the password	OCPP Server	1	sarah- yuqi.sun1@cn.abb.com	Cdot customer	Operator	sarah	01/09/2020 18:44	Not Frozen	6
		2	jun.sun@chargedot.com	Cdot LSU	Operator	jun	31/08/2020 15:42	Not Frozen	d Ø

Add a New Web account

💥 TerraConfig		Cdot LSU)jun	e
Authorization Management	Authorization Management>Web Account>Add a New App Account			
Company Management	Add a New Web Account			
Web Account				
App Account	* Account Email:			
OCPP Server	* Account Type:			
Configuration	* User Name:			
	* Company:			
	Contact Number:			
	Instructions:			
	Cancel OK			

Web Account



Add a New App account

💥 TerraConfig		Cdot LSU	B jun	G
Authorization	Authorization Management>App Account>Add a New App Account			
Company Management	Add a New App Account			
Web Account				
App Account	* Account Email:			
	* Account Type:			
CCPP Server	* User Name:			
	* Company:			
	Contact Number:			
	Instructions:			
	Cancel OK			

TerraConfig Web portal

Timeline and description must be added



TerraConfig Web portal - Third Party Domain Configuration

Example of list of 3rd Party

Server:

		.cotabb.mota	ienenargeaoaconi, «, e	seppy servery lise					-,	RP INF	
Third party domain	💥 TerraConfig								Cdot LSU	Jun jun	G
configuration section	Authorization Management	OCPP Servers	Configuration>Third Party [Domain Configuration							
List of backend showing: Domain	OCPP Server Configuration	Third P	arty Domain Configur	ation					+ Ac	ld a New Configur	ration
Port	Certificate Management										
Protocol type and version		NO.	Third Party Name	Url	Port	Protocol Type	Protocol Version	Certificate Code	Certificate Validity		
To Add new configuration		1	CDTEST	wss://testabb.cdlink.cha rgedot.com:9090/ocpp	9090	OCPP	ocpp16j	11	10/11/2006 - 10/11/2031	1)

Detail about backend

TerraConfig Web portal - Add a new configuration

Once a new Configuration is created by filling all the fields, the server will add it to

	\leftarrow \rightarrow C $$ https:/	//testabb.installer.chargedot.com/#/ocpp/server/add		९ 🕁 📴		
	💥 TerraConfig			🖶 Cdot LSU 💽 jun 🕒	<	OCPP Server
	Authorization Management	OCPP Server Configuration>Third Party Domain Configuration>Add a new i	OCPP Server Configuration			
Once a new	OCPP Server Configuration	Add a New Configuration				
Configuration is created	Third Party Domain Configuration				Original	Charger Externa
by filling all the fields,	Certificate Management	Third Party Name:	uer//	*	Enable this functio	n to allow external organizatior
the server will add it to		rjya.	wss.//		Enable external	access
the list and will be		URL: Protocol Type:		*	Serial Numbe	I r
available via TerraConfig		Protocol Version:		*	Server Info	10234
Арр.		✓Password:	\$\$	*	chargepointse	rvicej.greenflux.nl
		Repeated Password:	it.	*		
		Certificate Upload:		*		Total: 4 data
		Company:	Cdot LSU,Cdot customer Select	*	chargepoints	ervicej.greenflux.nl
		Instruction:			abb.cdlink.ch	argedot.com

testabb.cdlink.chargedot.com

ocpp16.chinacloudsites.cn

TerraConfig App

Where to find the TerraConfig App?

By 'TerraConfig' in App or Google play store

Note: Previously downloaded TerraConfig App need to be updated to minimum version 1.3.







Log in with TerraConfig account

- Install and open TerraConfig App
- Log in with credentials received by email upon account request.
- Follow the steps to create your own password and log in.

📉 TerraConfig	X TerraConfig
Activation of your new TerraConfig account	Log in
Dear Marouan,	Christian.van-maurik@nl.abb.com
You have signed up for a TerraConfig user account email address	Password 🗞
Please use the original password to log in, change it after first log in.	Forget your password?
ME699159	LOGIN
Thank you for using TerraConfig , we are here to start a new experience in experiencing charger installer service.	
For answers to frequently asked questions and additional support resources, email us at developer@chargedot.com	
Best Regards,	
TerraConfig Development Team.	
* This is automatically generated e-mail, please do not reply. *	

Connect to Charger

- Smart phone needs to be connected to the internet and Bluetooth connection enabled
- 2. Press 'Connect Charger' to activate search for Charger
- 3. Select your Charger from the Device List by Serial Number
- Enter the Pin code (letters + numbers) given by Charger owner and press 'Continue'.

Note: owner can change the pin code by ChargerSync App

5. TerraConfig App will connect to that charger







٠

Device Sync



- 'Device Sync' allows the charger to be manually synchronized with the ABB back-end.
- Recommended to always press 'Device Sync' after commissioning/ changes done by TerraConfig App

.



Firmware Info



In 'Firmware Info' package version/ firmware version ٠ < Firmware Info can be found. Basic Info Package Code TAC3Z9119006710273 Package Version V 1.0.11

.



Device Info



With 'Device Info' the user can find product details as well the Device Log in case diagnostics are needed.

- Serial Number
- Product Type
- Max Power (kW)
- Max Current (A)
- Phases
- Outlet
- Internet support
- Certification
- Live status of Internet Connection
- Server Info
- Device Log

<	De	vice Info
I	Basic Info	
	Serial Number	
	TACW2242020S01	55
	Product Type	
	TAC-W22-S-R-C-0	
	Performance	
	Max Power	22kW
	Max Current	32A
	Phases	3
	Outlet t	ype 2 socket with shutter
	Internet suppot	4G WIFI LAN BLE RFID
	Certification	
I	Internet Connection	n
	Туре	LAN
	Status	Connected
	Server Info	
	abb.cdlink.charge	dot.com
I	Device Log	>

<		Device Lo	9
		Error Log	Stop Reason
	(!)	14/05/2020 13:37 Over Current	
	()	14/05/2020 13:37 Under Voltage	
	(!)	14/05/2020 13:37 Over Voltage	
	()	14/05/2020 13:36 Over Current	
	()	14/05/2020 13:35 Under Voltage	
	()	14/05/2020 13:35 Over Voltage	
	()	14/05/2020 13:34 Over Current	
	(!)	14/05/2020 13:34	

Device Update



With 'Device Update' the latest firmware or specific version can be downloaded and uploaded to the charger.

Press "+" and the TerraConfig App will search for available Firmware.

Followed by Add Package and Upload Package to the charger.



Charger Link



With ChargerLink the charger

internetconnectivity option can be selected.

Options are

- LAN (default)
- Offline (When using the charger in offline mode only the status connectivity LED can be disabled)
- Wi-Fi
- 4G

Note: Enable LAN or switch to LAN from 4G or Wi-Fi will initiate the charger to restart!

<	Charger Link		<
	Activation of Network		Activation
	Select the type of network you want your charger to. O Enable LAN or switch LAN to 4G o initiate the charger to restart.	t to connect or Wi-Fi will	Select the type your charger t O Enable LAN initiate the o
	Wi-Fi	\bigcirc	Wi-Fi
	4G	\bigcirc	4G
	APN Settings	Off >	APN Setting
	LAN		LAN
	Offline	\bigcirc	Offline

	Charger Link	
	Activation of Network	
	 Select the type of network you want to conryour charger to. Construction of the second se	vill
	Wi-Fi	\bigcirc
	4G	\bigcirc
	APN Settings	Off >
	LAN	\bigcirc
$\left[\right]$	Offline	

Charger Link – Wi-Fi



Before configuring the Charger Wi-Fi connection the smart phone needs to be connected to the selected Wi-Fi network first.

enable Wi-Fi and press Wi-Fi Settings
 SSID shows the connected Wi-Fi

network

- 3. Enter Wi-Fi password and press 'Next'
- 4. Charger is connected to Wi-Fi network

Charger Link		< <u><</u>
Activation of Network		Wi-Fi Configuration Wi-Fi Configuration
Select the type of network you war	t to connect	Please make sure the APP is connected with
 Enable LAN or switch LAN to 4G initiate the charger to restart. 	or Wi-Fi will	SSID: Mrescude
Wi-Fi		Enter Password ©
Wi-Fi Settings	>	
4G	\bigcirc	
APN Settings	On >	
LAN	\bigcirc	
Offline	\bigcirc	
		Q W E R T Y U I O P
		A S D F G H J K L
		★ Z X C V B N M <
		123 🌐 🖉 space return

Charger Link – 4G



Before configuring the Charger 4G connection insert the m2m nano sim card

- enable 4G and enter APN settings

(example Vodafone) and press Configure.





OCPP Server



Before enable an External OCPP access the OCCP server details need to be entered/ known in the TerraConfig Portal Account. Select the External OCPP server and press Configure.

Without 'Server Info' will show '----'.



How to configure User Settable Max Static Current Limit?

Charger Pairing Switch Charger 🗍 Connected 👂 💿 🙆 💷 Disconnect 📿 🖉 TACW2242020S0155 Self Detect \otimes Ē Device Sync Firmware Info Device Info Configuration $\overline{\mathbb{W}}$ (F) \$ Device Update Charger Link OCPP Server 0 Ø Card Device Mode Settings 0

Use 'Settings' followed by 'Local Power Grid Configuration' <u>only</u> to configure the 'User- settable Max Static Current'. The Charger can be limited to 10/16/32A. Press 'Save' and red check mark (top corner right) to confirm.

The max static limit is not accessible by ChargerSync App.

Please do not use other visible menu items as this will be improved in the next release.

Charge Point Settings		<u> </u>			
Charge Point Employ Info	harge Point Employ Info		ion	Local Power Grid Configuration	
ocal Power Grid Configuration	>	User-settable Max Current	32 🔻	User-settable Max Current	32
electrical Protection Settings	>	Frequency of AC Current	50 🔻	Frequency of AC Current	50
5		Charging Priority	1/2	Charging Priority	1
onnection Laver Settings		Local standard voltage	230 <i>/</i> _	Local standard voltage	230
ocket Configuration	>	Threshold of Over Voltage	20%	Threshold of Over Voltage	20%
AN Configuration	>	Threshold of Lack Voltage	20%	Threshold of Lack Voltage	20%
//El Configuration	>	Threshold of Over Current 1	13%	Thrashold of Over Current 1	10
SM Configuration	>	Threshold of Over Current 2	28%	User-settable Max Cur	rent
luetooth Device Information	>				
FC Device Settings	>			10	
				16	
				32	

Card



Use Card menu to 'Enable external 3rd party RFID cards.

Following cards are compatible:

SO 14443 type A and type B, UID 4 bytes.

The UID 7 bytes will be available in the next release.

if the RFID type is unknown an additional 'NFC' tool can be used. Preferred from google play store as most of the NFC tools from App store do not work.

<	Card Config
	Card Permissions
l	Enable external cards
	Turn on this option and default card will be
	denied by this charger.

Device Mode



With Device mode the Terra AC Wallbox can be enabled for free vending mode.

- **no authentication** (RFID authorization/
 - ChargerSync App is not needed)

Device Mode	Device Mode		
Free Vending	D		
Enable this feature and the charging session will happen without authentication at any time	э.		

Me

My Account and About TerraConfig



In Me section the TerraConfig account can be managed. - in 'My Account' it's possible to edit username and change password of TerraConfig app account. - in 'About TerraConfig' TerraConfig App version can be found



